

FAQ - Cleaning of the Norgren valve!



The valve is located below the downstacker unit of your CanMan welder.



Undo the four screws.



Take off the housing of the valve and clean the valve with compressed air, but only to a max. of 2 bar pressure! => Wear glasses!