

FAQ_CM26_002 – How to change a processor board?

Software Upgrade

The software for the Pacemaker HF is memorized on a small processor board. For an update with new software, you need to change this board.



NOTE:

Before you start to change the board write down the voltage value you were using for your application.



Switch off the main switch of PowerCURE™




WARNING:


Wait 5 minutes, before you remove the cover. Capacitors with high voltage inside!



Remove the processor board carefully by hand. Do not use any tools for that.

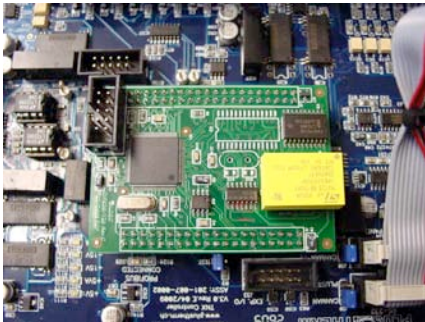

Install the new processor board.

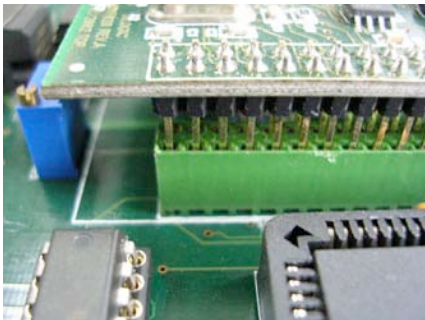

NOTE:

Be careful and make sure that you mount the new processor board correctly and that pins match the socket!! Watch from the side.



NOTE:

When you first start up, use a low voltage of approx. 80 V.

We hope the upgrade work was successful. Thank for your support!